

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse


Prescripciones de apriete para culatas

630.870
 passend für / suitable for
 adaptable à / adaptable a

Ford


Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
 Tête de vis / Cabeza de tornillo

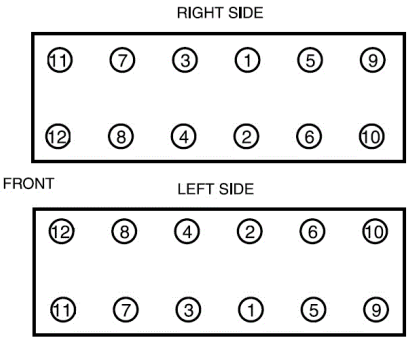

- | | | |
|---|--|---|
| Anziehen/
Tightening/
Serrage/
Apriete |  30 lb-ft
 90°
 90° |  40 Nm
 90°
 90° |
|---|--|---|

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ford V10 6.8L 415cid LH
 E-350 Super Duty 1999-2017
 F-250 Super Duty 1999-2004
 F-350 Super Duty 1999-2004

E-350 Club Wagon, Excursion, E-250 Econoline

Elring-Serviceteam Fon +49 7123 724 799 Fax +49 7123 724 798 service@elring.de	24/01/22	*630.870*
---	----------	------------------