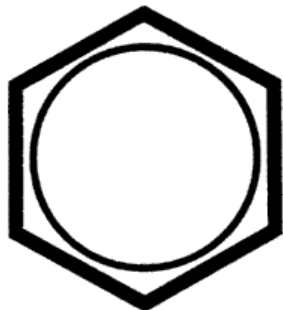


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****777.820**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo


823.290

M10x160x1,5

+M8x1,25x121

Anziehen/
Tightening/
Serrage/
Apriete

- 10 Nm (1-12 M10)
- 5 Nm (13-22 M8)
- 20 Nm (1-12 M10)
- 10 Nm (13-22 M8)
- 50 Nm (1-12 M10)
- 180° (1-12 M10)
- 25 Nm (13-22 M8)
- 180° (13-22 M8)

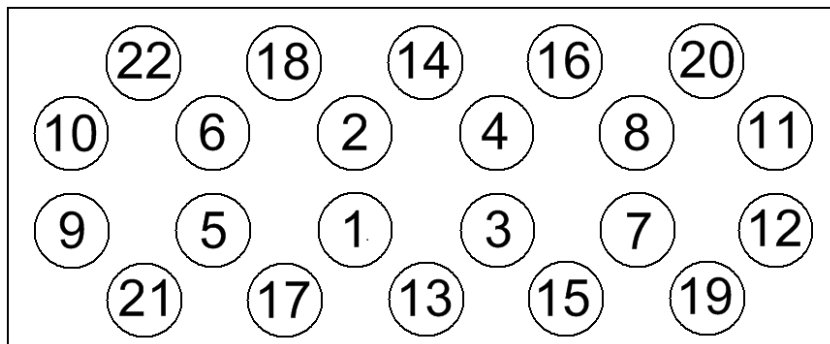**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 91,0 mm; ÷ 1,15 mm; 2 Löcher/notch

Mot: SAFA;SAFB

3,2 ltr TDCi

Transit 09.07 - 08.14

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

777.820