



**Do not disassemble part of EGR valve from manifold. It will cause rejection of potential claim.**

Reason: sealing part of EGR valve is located inside manifold and replacement of top part of valve will not solve the problem if the cause is inside sealing part of EGR valve.

