

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

893.617

passend für / suitable for
adaptable à / adaptable a

BMW




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



802.810
M 11 x 140

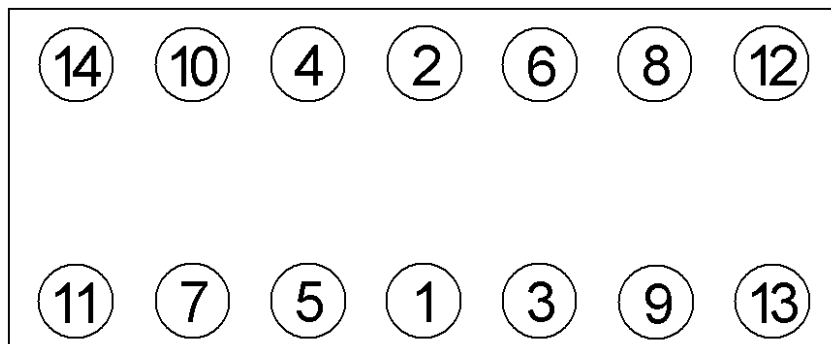

Anziehen/
Tightening/
Serrage/
Apriete

> 1988
● 50 - 60 Nm
● 15 min
➤ 75°
* 25 min
➤ 85° - 95°

1989 >
● 50 - 60 Nm
● 15 min
➤ 90°
* 25 min
➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. M21 D24

E30 324d, td >12/1988

E28 524d, td

E34 524td

80 Ø, ÷1,55 mm,

1 Loch, Hole, Trou, Agujero

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

893.617