


AK KITS

AK 058

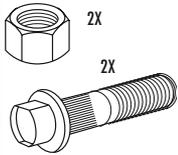

2 x AK → 

Lower mounting kit for strut assembly: camber adjustment


AK 201



1 x AK → 

New rubber bushes for upper mounting

AK 217

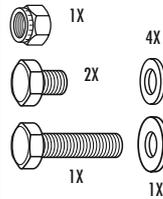


2 x AK → 

To replace original lower mounting bolts and nuts if damaged or unable to be re-used

AK 218 > AK 223


AK 226 > AK 227

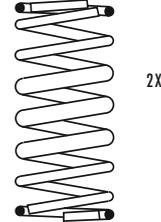

1 x AK → 

2 replacement springs for cars originally equipped with automatic leveling system


AK 228



1 x AK → 

For cars of which original shock is mounted without this spacer


AK 243



1 x AK → 

This adapter kit is required on cars with ABS brakes

AK 247

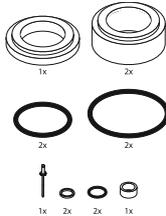

4 x AK → 

Replacement kit when exchanging the air spring on the shockabsorber.