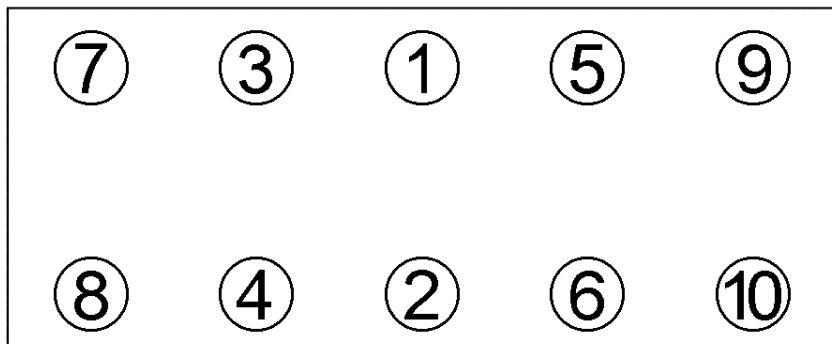
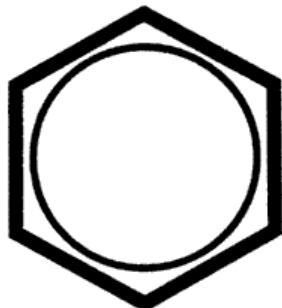


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****496.330**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape    Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloAnziehen/  
Tightening/  
Serrage/  
Apriete

Mondial

60 Nm  
MAX 104 Nm  
➤ MAX 131°

Challenge

Stradale

60 Nm  
MAX 90 Nm  
➤ MAX 76°**Zeichenerklärung / Explanations / Explication / Explicacion**

|  |                                             |                              |                                |                                       |
|--|---------------------------------------------|------------------------------|--------------------------------|---------------------------------------|
|  | neue Zylinderkopfschrauben verwenden        | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
|  | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
|  | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
|  | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
|  | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 86 mm; &gt;: 1,50 mm

Mot.: 3,6 ltr. / V8

360 GTC Modena

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/01/22

**\*496.330\***